# STARTE



## CUTLER HAMMER/EATON B100 STARTERS FULL VOLTAGE, NON-REVERSING SINGLE AND POLYPHASE

#### **Applications**

XMSW Series, non-reversing, manual line voltage starters and enclosures are suitable for use in applications requiring manual across-the-line starting and stopping of small single and polyphase AC motors, and where overload protection is needed. Manual starters are generally used on small machine tools, fans and blowers, pumps, compressors, and conveyors as well as many other types of electrical machinery.

## FEATURES-SPECIFICATIONS

#### **Features**

- Rectangular bolted cover design provides for attractive, compact, uniform installations
- Enclosure and external handle are diecast copper-free (less than 0.4%) aluminum alloy
- Cast "ON," "OFF," "TRIPPED" markings on cover align with external handle and provide clear indication of enclosed starter condition
- External handle is a vault type with standard provisions for locking in the "OFF" position with up to three pad-locks. Provision for locking in "ON" position is available as factory modification (add suffix SU-40 to catalog number).
- Two cast 1" NPT conduit hubs with integral pipe stop, one top and one bottom, are standard on all assemblies


## **Electrical Rating**

Starter sizes 0, 1, 11/2

Two pole, single phase; three pole, polyphase

Maximum 10 HP, 600 Volts AC

### **Dimensions**

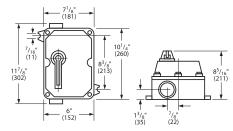

Select heater element based on motor nameplate listed. Full-load amps. Trip rating of element is 125% of motor minimum F.L.A. listed for the element.

# MANUAL LINE STARTERS



Class I, Div. 1 & 2, Groups C, D Class I, Zones 1 & 2, Groups IIB, IIA Class II, Div. 1 & 2, Groups E, F, G Class III NEMA 3R, 7 (C, D) 9 (E, F, G)

UL)usted - File E12379

See files for details or call Killark.

XMSW MANUAL LINE STARTERS © ②										
NEMA SIZE	NUMBER OF Pole Size	MAX	IMUM HORSEPO	CATALOG NUMBER						
		120 VAC	208-240 VAC	480-600 VAC	WITH STARTER	ENCLOSURE ONLY				
0	2-P0LE; 1Ø, A C	1	2	_	XMSW-0BT					
0	3-P0LE; 3Ø, A C	2	3	5	XMSW-OCT					
1	2-P0LE; 1Ø, A C	2	3	_	XMSW-1BT	XMSW-00T				
1	3-P0LE; 3Ø, A C	3	7-1/2	10	XMSW-1CT					
1-1/2	2-P0LE; 1Ø, A C	3	5	_	XMSW-DBT					

- ① Heaters not included. If heaters are required order as separate item by catalog number, three phase starters require three heaters. Single phase starters require two heaters.
- ② Three pole starters may be used on two-phase four-wire circuits by running one wire direct to motor.

HEATER TABLE FOR XMSW SERIES MANUAL LINE STARTERS③									
CATALOG NUMBER	MOTOR FULL-LOAD Amps @ 40°C		CUTLER-	CATALOC NUMBER	MOTOR FULL-LOAD Amps @ 40°C		CUTLER-		
CATALUG NUMBER	SINGLE Phase	THREE PHASE	HAMMER	CATALOG NUMBER	SINGLE PHASE	THREE PHASE	HAMMER		
YOWEA200-FH03	.2829	.2526	FH03	YOWEA200-FH30	4.04-4.40	3.54-3.86	FH30		
YOWEA200-FH04	.3033	.2729	FH04	YOWEA200-FH31	4.41-4.81	3.87-4.22	FH31		
YOWEA200-FH05	.3436	.3032	FH05	YOWEA200-FH32	4.82-5.26	4.23-4.61	FH32		
YOWEA200-FH06	.3740	.3335	FH07	YOWEA200-FH33	5.27-5.74	4.62-5.03	FH33		
YOWEA200-FH07	.4145	.3639	FH07	YOWEA200-FH34	5.75-6.25	5.04-5.49	FH34		
YOWEA200-FH08	.4650	.4044	FH08	YOWEA200-FH35	6.27-6.83	5.50-5.99	FH35		
YOWEA200-FH09	.5156	.4549	FH09	YOWEA200-FH36	6.84-7.45	6.00-6.53	FH36		
YOWEA200-FH10	.5763	.5055	FH10	Y0WEA200-FH37	7.46-8.11	6.54-7.11	FH37		
YOWEA200-FH11	.6470	.5661	FH11	YOWEA200-FH38	8.12-8.81	7.12-7.73	FH38		
YOWEA200-FH12	.7178	.6268	FH12	YOWEA200-FH39	8.82-9.58	7.74-8.40	FH39		
YOWEA200-FH13	.7986	.6975	FH13	YOWEA200-FH40	9.59-10.40	8.41-9.12	FH40		
YOWEA200-FH14	.8795	.7683	FH14	Y0WEA200-FH41	10.41-11.3	9.13-9.89	FH41		
YOWEA200-FH15	.96-1.04	.8491	FH15	YOWEA200-FH42	11.4-12.2	9.9-10.7	FH42		
YOWEA200-FH16	1.05-1.14	.92-1.00	FH16	YOWEA200-FH43	12.3-13.5	10.8-11.8	FH43		
YOWEA200-FH17	1.15-1.25	1.01-1.10	FH17	YOWEA200-FH44	13.6-14.9	11.9-13.0	FH44		
YOWEA200-FH18	1.26-1.39	1.11-1.22	FH18	YOWEA200-FH45	15.0-16.0	13.1-14.0	FH45		
YOWEA200-FH19	1.40-1.54	1.23-1.35	FH19	YOWEA200-FH46	16.1-17.1	14.1-15.0	FH46		
YOWEA200-FH20	1.55-1.71	1.36-1.50	FH20	YOWEA200-FH47	17.2-18.3	15.1-16.1	FH47		
YOWEA200-FH21	1.72-1.89	1.51-1.66	FH21	YOWEA200-FH48	18.4-19.7	16.2-17.3	FH48		
YOWEA200-FH22	1.90-2.10	1.67-1.84	FH22	YOWEA200-FH49	19.8-21.2	17.4-18.6	FH49		
YOWEA200-FH23	2.11-2.32	1.85-2.03	FH23	YOWEA200-FH50	21.3-22.8	18.7-20.0	FH50		
YOWEA200-FH24	2.33-2.54	2.04-2.23	FH24	YOWEA200-FH51	22.9-24.5	20.1-21.5	FH51		
YOWEA200-FH25	2.55-2.79	2.24-2.45	FH25	YOWEA200-FH52	24.6-26.4	21.6-23.2	FH52		
YOWEA200-FH26	2.80-3.07	2.46-2.69	FH26	YOWEA200-FH53	26.5-28.5	23.2-25.0	FH53		
YOWEA200-FH27	3.08-3.36	2.70-2.95	FH27	YOWEA200-FH54	28.6-30.8	25.1-26.8	FH54		
YOWEA200-FH28	3.37-3.68	2.96-3.23	FH28	YOWEA200-FH55	30.9-33.3	_	FH55		
YOWEA200-FH29	3.69-4.03	3.24-3.53	FH29	YOWEA200-FH56	33.4-36.0	_	FH56		
				YOWEA200-FH57	36.1-38.9	_	FH57		