
## Installation Instructions For Small Grounding Kit 87927766



A Pentair Company HOFFMAN

2100 Hoffman Way Anoka, MN 55303-1745 USA (763) 421-2240 Fax: (763) 422-2178 Customer Service: (763) 422-2211 www.hoffmanonline.com

## PANEL SCREWS ENCLOSED

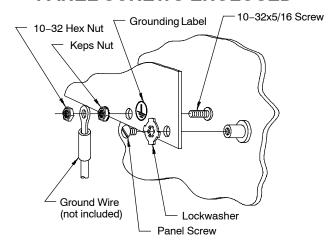

- Insert the 10-32x5/16 screw through the hole in the panel as shown.
- Secure screw with keps nut. The keps nuts must penetrate into the paint to insure electrical continuity.
- Attach the ground wire and secure with 10–32 hex nut as shown.
- Install the lockwasher under one of the screws securing the panel to insure grounding between the panel and the enclosure.
- Attach included grounding label adjacent to the bolt as shown.

Rev. A 118389

© 2007 Hoffman Enclosures Inc.

P/N 87927815

87927816

