


# Installation Instructions For Small Grounding Kit

87927766



## PANEL SCREWS ENCLOSED

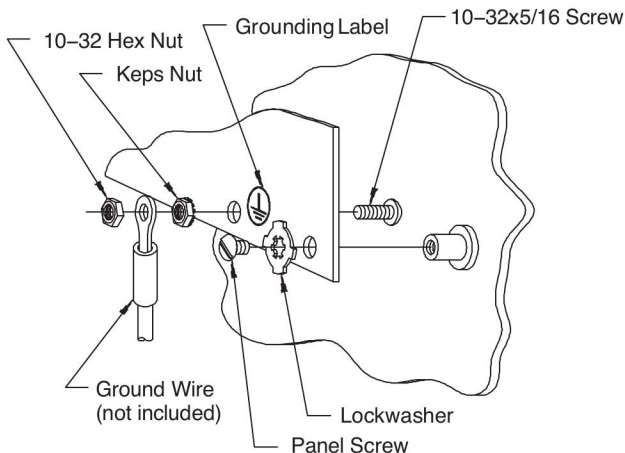

1. Insert the 10-32x5/16 screw through the hole in the panel as shown.
2. Secure screw with keys nut. The keys nuts must penetrate into the paint to insure electrical continuity.
3. Attach the ground wire and secure with 10-32 hex nut as shown.
4. Install the lockwasher under one of the screws securing the panel to insure grounding between the panel and the enclosure.
5. Attach included Hex grounding label adjacent to the bolt as shown.