

# QUINT-ORING/24DC/2X20/1X40

## Active redundancy module



Data sheet  
104623\_en\_02

© PHOENIX CONTACT 2012-06-29

## 1 Description

QUINT ORING is the DIN-rail mountable active redundancy module from the QUINT POWER product range.

With the help of the redundancy module, two power supply units of the same type switched for redundancy on the output side are decoupled 100% from each other.

Redundant systems are used in plants that make particularly high demands on operational safety. The power supply units involved must be dimensioned to enable the total current requirements of all loads to be covered by one single power supply unit.

If the total requirement increases, e. g., due to additionally installed loads, and exceeds the nominal current of the power supply units, the power supply unit system is no longer redundant. A defect in the power supply unit or the wiring can also lead to loss of redundancy.

This can be detected immediately via a floating signal contact and a corresponding LED.

The Auto Current Balance (ACB) technology allows even current distribution of the load current to the connected power supply units, which decisively increases the service life of the redundant system.

### Features

- low-loss decoupling of power supply units connected in parallel
- Preventive function monitoring
- Auto Current Balance technology



Make sure you always use the latest documentation.  
It can be downloaded from the product at [www.phoenixcontact.net/catalog](http://www.phoenixcontact.net/catalog).



This data sheet is valid for all products listed on the following page:

<b>2</b>	<b>Table of contents</b>	
1	Description .....	1
2	Table of contents .....	2
3	Ordering data .....	3
4	Technical data .....	3
5	Safety regulations and installation notes.....	6
6	Structure .....	7
7	Basic circuit diagram .....	7
8	Installation .....	7
9	Mounting position .....	8
10	Mounting on DIN rails .....	9
11	Input .....	9
12	Output.....	9
13	Signaling.....	10
	13.1 "Redundancy OK" floating signal contact .....	11
	13.2 Floating signal contact "ACB OK" .....	11
14	Function.....	11
	14.1 Input/output.....	11
	14.2 ACB technology .....	11
	14.3 Protection against static surge voltage .....	11
15	Derating.....	12
	15.1 Temperature response .....	12
	15.2 Position-dependent derating.....	12

### 3 Ordering data

Description	Type	Order No.	Pcs. / Pkt.
Active redundancy module with ACB technology and monitoring functions	QUINT-ORING/24DC/2X20/1X40	2320186	1

Accessories	Type	Order No.	Pcs. / Pkt.
Universal wall adapter	UWA 182/52	2938235	1
Assembly adapter for QUINT-PS... power supply on S7-300 rail	QUINT-PS-ADAPTERS7/1	2938196	1

### 4 Technical data

Input data/output data	
Nominal input voltage range	24 V DC
DC input voltage range	18 V DC ... 28 V DC (SELV)
Voltage drop, input/output	0.2 V (I <sub>OUT</sub> = 20 A)
Nominal current	2x 20 A (-25 °C ... 60 °C) 1x 40 A (-25 °C ... 60 °C)
Maximum current	2x 26 A (-25 °C ... 40 °C) 1x 52 A (-25 °C ... 40 °C)
Transient surge protection	Varistor
Protection against polarity reversal	< 60 V
Protective circuit	Protection against static surge voltages > 30 V
Nominal output voltage	0.2 V (< DC input)
Output current	40 A (Increasing power) 20 A (Redundancy)
Derating	60 °C ... 70 °C (2.5%/K)
Power loss nominal load max.	4 W (I <sub>OUT</sub> = 20 A)
Efficiency	> 98 %

Redundancy OK, 13/14	
Output description	Group contact
Voltage	max. 30 V AC/DC
Current	≤ 100 mA (short-circuit resistant)
Status display	LED redundancy OK / Green

ACB (Auto Current Balancing) OK, 23/24	
Output description	Contact closed: Δ U <sub>IN</sub> ≤ 300 mV
Voltage	max. 30 V AC/DC
Current	≤ 100 mA (short-circuit resistant)
Status display	ACB OK LED / LED bar graph green

General data	
Insulation voltage input, output / housing	500 V
MTBF	> 500000 h
Mounting position	horizontal DIN rail NS 35, EN 60715
Housing material	Steel sheet, zinc-plated
Dimensions W / H / D	38 mm / 130 mm / 125 mm
Dimensions W / H / D (90° turned)	122 mm / 130 mm / 41 mm
Weight	0.6 kg

**Security**

Degree of protection	IP20
Protection class	III
SELV	IEC 60950-1 (SELV) and EN 60204 (PELV)

**Input / signal output connection data**

Connection method	Screw connection
Conductor cross section, solid	0.2 mm <sup>2</sup> ... 6 mm <sup>2</sup>
Conductor cross section, stranded	0.2 mm <sup>2</sup> ... 4 mm <sup>2</sup>
Conductor cross section AWG/kcmil	10 ... 10
Stripping length	8 mm
Screw thread	M3
Tightening torque	0.5 Nm ... 0.6 Nm

**Output connection data**

Connection method	Screw connection
Conductor cross section, solid	0.5 mm <sup>2</sup> ... 16 mm <sup>2</sup>
Conductor cross section, stranded	0.5 mm <sup>2</sup> ... 16 mm <sup>2</sup>
Conductor cross section AWG/kcmil	6
Stripping length	10 mm
Screw thread	M4
Tightening torque	1.2 Nm ... 1.5 Nm

**Ambient conditions**

Ambient temperature (operation)	-25 °C ... 70 °C (> 60 °C derating)
Ambient temperature (storage/transport)	-40 °C ... 85 °C
Max. permissible relative humidity (operation)	≤ 95 % (at 25 °C, no condensation)
Vibration (operation)	< 15 Hz, amplitude ±2.5 mm (according to IEC 60068-2-6) 15 Hz ... 150 Hz, 2.3g, 90 min.
Shock	30 g in each direction, according to IEC 60068-2-27
Pollution degree in acc. with EN 50178	2
Climatic class	3K3 (in acc. with EN 60721)

**Standards**

Electrical Equipment for Machinery	EN 60204
Electrical safety (of information technology equipment)	EN 60950-1/VDE 0805 (SELV)
Electronic equipment for use in electrical power installations	EN 50178/VDE 0160 (PELV)
SELV	IEC 60950-1 (SELV) and EN 60204 (PELV)

**Approvals**

UL approvals	UL/C-UL listed UL 508 UL/C-UL Recognized UL 60950
--------------	--

**Conformance with EMC Directive 2004/108/EC**

**Noise immunity according to EN 61000-6-2**

Electrostatic discharge	EN 61000-4-2	
	Contact discharge	4 kV (Test intensity 2)
	Discharge in air	8 kV (Test intensity 3)
	Comments	Criterion B
Electromagnetic HF field	EN 61000-4-3	
	Frequency range	80 MHz ... 1 GHz
	Frequency range	1.4 GHz ... 2 GHz
	Frequency range	2 GHz ... 2.7 GHz
	Comments	Criterion A
Fast transients (burst)	EN 61000-4-4	
	Input	2 kV (Test intensity 3 - asymmetrical)
	Output	2 kV (Test intensity 3 - asymmetrical)
	Signal	1 kV (Test intensity 3 - asymmetrical)
	Comments	Criterion B
Surge current loads (surge)	EN 61000-4-5	
	Input	0.5 kV (Test intensity 1 - symmetrical) 0.5 kV (Test intensity 1 - asymmetrical)
	Output	0.5 kV (Test intensity 1 - symmetrical) 0.5 kV (Test intensity 1 - asymmetrical)
	Signal	1 kV (Test intensity 2 - asymmetrical)
	Comments	Criterion B
Conducted interference	EN 61000-4-6	
	Input/Output/Signal	asymmetrical
	Frequency range	0.15 MHz ... 80 MHz
	Comments	Criterion A

**Emitted interference in acc. with EN 61000-6-3**

Radio interference voltage in acc. with EN 55011	EN 55011 (EN 55022) Class B, area of application: Industry and residential
Emitted radio interference in acc. with EN 55011	EN 55011 (EN 55022) Class B, area of application: Industry and residential

## 5 Safety regulations and installation notes

**EXPLOSION HAZARD**

Only remove equipment when it is disconnected and not in the potentially explosive area!

**DANGER**

Never carry out work on live parts!  
The housing can become very hot, depending on the ambient temperature and load!

**CAUTION:**

Before startup please ensure:

The connection must be carried out by a competent person and protection against electric shock guaranteed.

It must be possible to switch off power to device according to EN 60950.

All feed lines are sufficiently protected and dimensioned!

All output lines are dimensioned according to the maximum output current of the device or separately protected!

Sufficient convection must be guaranteed.

**ATTENTION: Danger if used improperly**

The redundancy module is a device installing into an enclosed space. Installation and startup may only be carried out by qualified personnel. The relevant country-specific regulations must be observed.

## 6 Structure

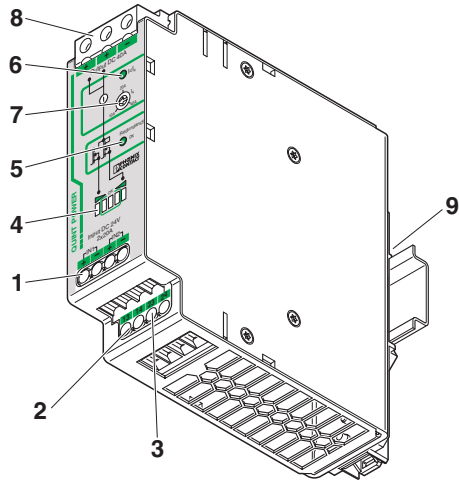


Figure 1 Function elements

- 1 IN1/IN2 DC input:  
24 V input voltage,  $I_N = 2 \times 20 \text{ A}$
- 2 Floating relay contact 13/14 "Redundancy OK"  
(max. 30 V, 100 mA, short-circuit-proof)
- 3 Floating relay contact 23/24 "ACB OK"  
(max. 30 V, 100 mA, short-circuit-proof)
- 4 Bar graph for displaying the current balance  $I_1/I_2$
- 5 "Redundancy OK" LED, green
- 6 LED " $I < I_N$ ", green
- 7 Rotary selector switch for selecting the nominal current of the power supply units
- 8 DC output approx.  $0.2 \text{ V} < \text{DC input}$
- 9 Universal snap-on foot for EN DIN rails

## 8 Installation

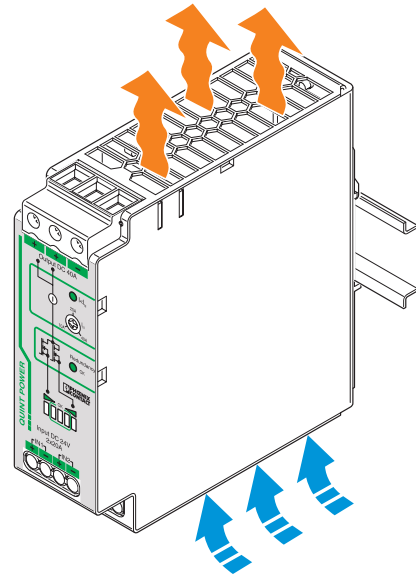


Figure 2 Convection




In order to ensure sufficient convection, we recommend a minimum vertical distance of 50 mm to the other modules. A lateral distance of 5 mm, and in the case of active components, that of 15 mm is necessary for proper functioning of the module. Depending on the ambient temperature and the load of the module, the housing can become very hot.



The module can be snapped onto all DIN rails according to EN 60715 and must be mounted horizontally (connecting terminal blocks on top and bottom).

## 7 Basic circuit diagram

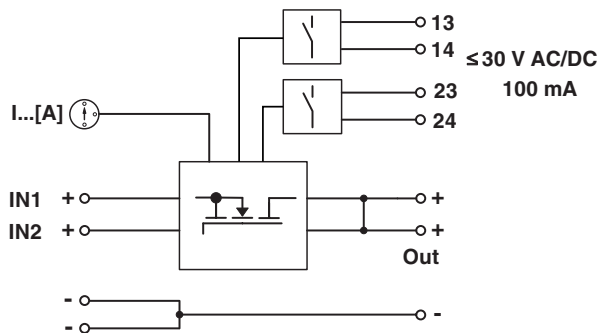

## 9 Mounting position

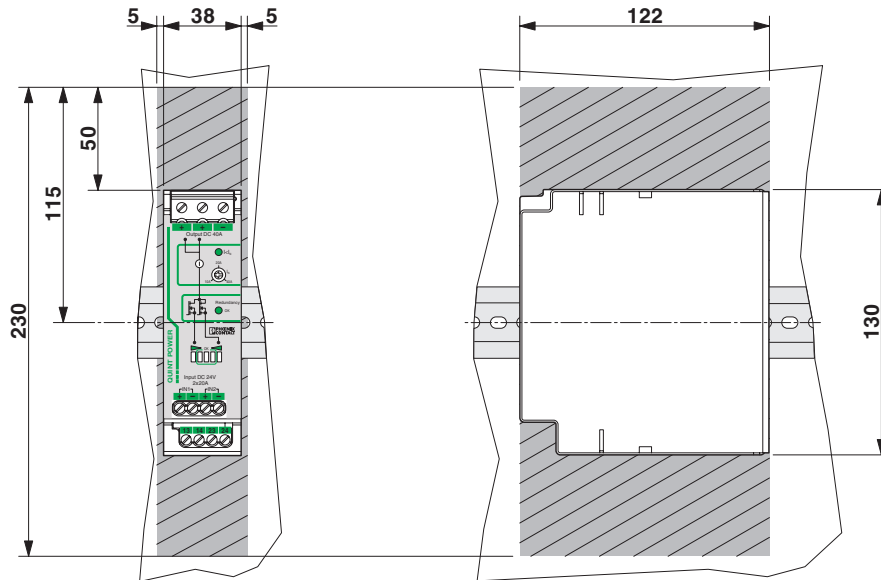


Figure 3 Installation dimensions

### Possible mounting positions:

Normal mounting position, installation depth 125 mm (+ DIN rail) (delivery state)

Rotated mounting position, 270° Y-axis, installation depth: 41 mm (+ DIN rail)



## 10 Mounting on DIN rails

### Assembly

Position the module with the DIN rail guide on the upper edge of the DIN rail, and snap it in with a downward motion.

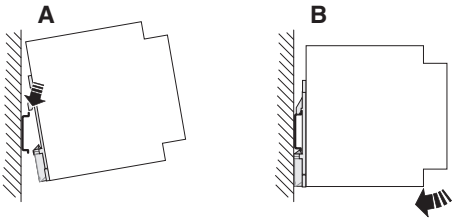


Figure 4 Assembly

### Removal

Pull the snap lever open with the aid of a screwdriver and slide the module out at the lower edge of the DIN rail.

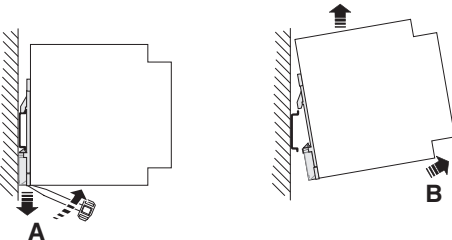


Figure 5 Removal

### Rotated mounting position (270° Y-axis)

A rotated mounting position can be achieved by mounting the module onto the DIN rail at a 270° angle. Mount the DIN rail adapter (UTA 107/30) as shown in the figure. No additional assembly material is required. Mounting screws: Torx® T10 (0.8 Nm ... 0.9 Nm tightening torque).

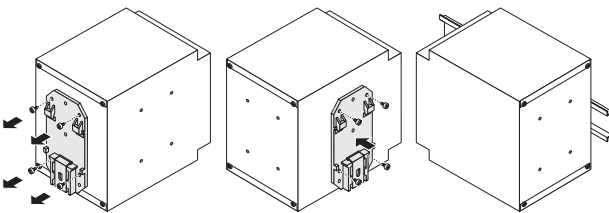


Figure 6 Rotated mounting position (270° Y-axis)



Other mounting positions are also possible. Always observe position-dependent derating.

## 11 Input

Connection of the input is made via connection terminal blocks "In1+" and "In2+".

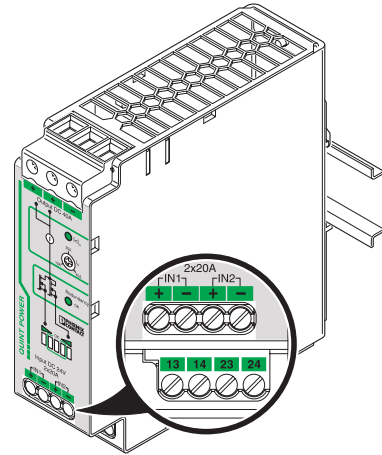


Figure 7 Input

### Protection of the primary side

The maximum current for each input is 26 A. Therefore use a current-limited source (e. g., QUINT POWER) or a suitable fuse.

## 12 Output

Connection of the output takes place via the internally connected "+" terminals and the "-" terminal.

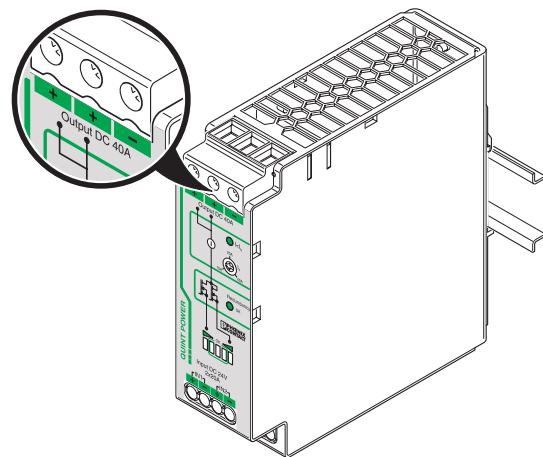


Figure 8 Output

### 13 Signaling

The "Redundancy OK" (13/14) and "ACB OK" (23/24) floating signal contacts are available for function monitoring.

In addition, the "Redundancy OK" and " $I < I_N$ " LEDs as well as the bar graph allow onsite function evaluation of the redundancy module.

To monitor the redundancy, the nominal current of the upstream power supply units can be set on the redundancy module using the rotary selection switch

The following table shows the possible states.

a)		b)		$I < I_N$ LED	Redundancy OK		ACB OK		Description
ok		ok			LED	Relay 13/14	Relay 23/24		
	or					closed	closed		Redundancy OK, load distribution OK
	or					closed	closed		Redundancy OK Load distribution OK by ACB however, power supply not optimally adjusted a) increase voltage at IN2 or decrease voltage at IN1 b) increase voltage at IN1 or decrease voltage at IN2
	or					closed	open		Redundancy OK No load distribution because power supply not adjusted a) increase voltage at IN2 or decrease voltage at IN1 b) increase voltage at IN1 or decrease voltage at IN2
X	or	X				open	X		No redundancy because $I > I_N$ Verify load current
	or					open	open		No redundancy because an input is not being supplied with power a) Check input IN2 and its connections b) Check input IN1 and its connections
	or					open	open		Short circuit at output of the redundancy module or Device is not being supplied with power
	or			X	X	X	X		If a red LED lights up permanently, the device must be checked by the manufacturer.

LED flashing    
 LED on    
 LED off    
 X Not relevant


Figure 9 Signaling

**13.1 "Redundancy OK" floating signal contact**

The floating signal contact reports the loss of redundancy by opening.


The following causes are possible:

- The decoupled component is defective.
- At least one input voltage is too low or does not exist.
- If the load current is higher than the set threshold value of  $I_N$ , a single power supply unit can no longer sustain the load. This is reported after 4 seconds.

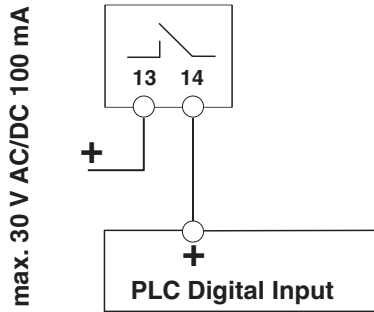

**13.2 Floating signal contact "ACB OK"**

The floating signal contact opens and reports that the load current is not distributed symmetrically on both parallel connected power supply units.

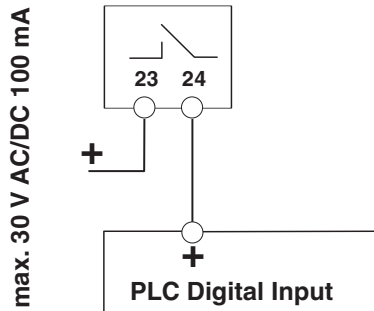


**14 Function**

The redundancy module decouples the outputs of two power supply units and ensures safe redundancy.

**14.1 Input/output**

Only one redundancy module is required for decoupling two power supply units 1 and 2 switched in parallel with nominal currents of up to 20 A.

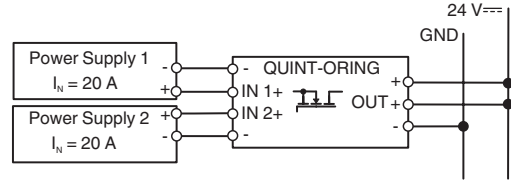

**14.2 ACB technology**

The service life of the redundantly operated power supply unit can be doubled by the Auto Current Balance (ACB) technology, which evenly loads both power supply units. The load current is automatically distributed symmetrically. Use connection cables of the same length and cross section.

**14.3 Protection against static surge voltage**

The IN 1 and IN 2 inputs are equipped with a protective circuit that is triggered in the event of static surge voltages >30 V. Two input voltages must be present that are independent of each other. Two-fold error safety against surge voltages can therefore be ensured in a system with QUINT POWER power supply units.

## 15 Derating

### 15.1 Temperature response

The active redundancy module can be operated with a maximum current of 2 x 26 A up to an ambient temperature up to +40 °C. In the case of ambient temperatures up to +60 °C, the device can be operated continually with the nominal current. In the case of ambient temperatures of more than +60 °C, the output power must be reduced by 2.5 % for each Kelvin increase of temperature. In the case of ambient temperatures of more than +70 °C or thermal overload, the device is not switched off. Reduce the output power enough to ensure protection of the device.

When using the QUINT POWER (20 A) power supply unit, the derating curve is maintained automatically.

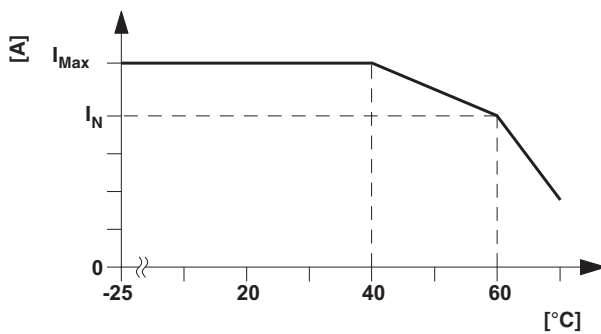


Figure 10 Derating diagram



### 15.2 Position-dependent derating

The redundancy module can be snapped onto all DIN rails according to EN 60715. It should be mounted horizontally in the normal mounting position (with the input terminals facing downward).



When installing in a different mounting position, derating should be adhered to.

The characteristic curve can be used to determine the maximal output power to be drawn for each ambient temperature for different mounting positions.



Normal mounting position

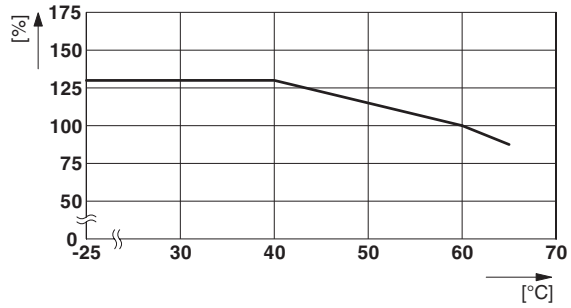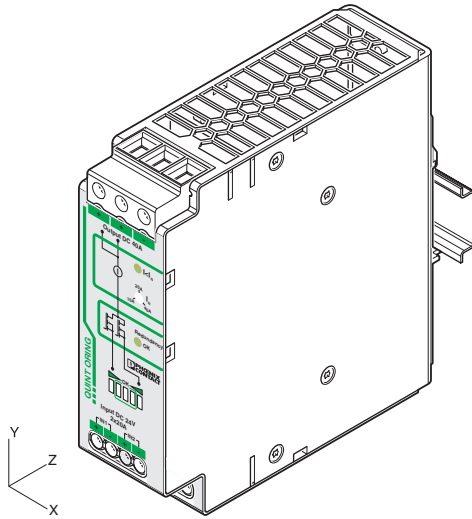



Rotated mounting position 90° X-axis

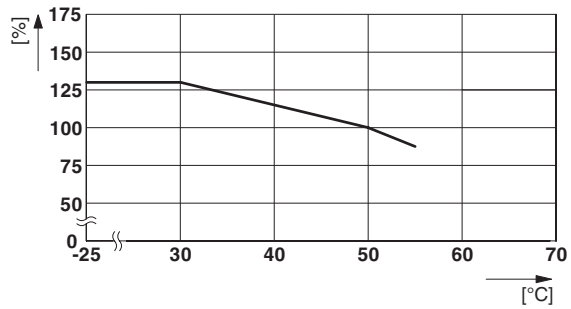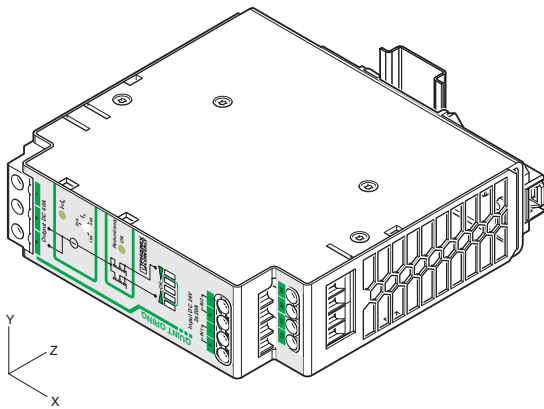



Rotated mounting position 180° X-axis

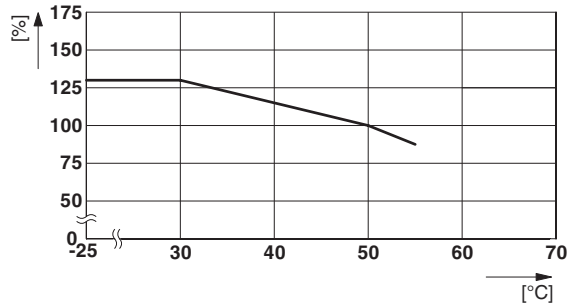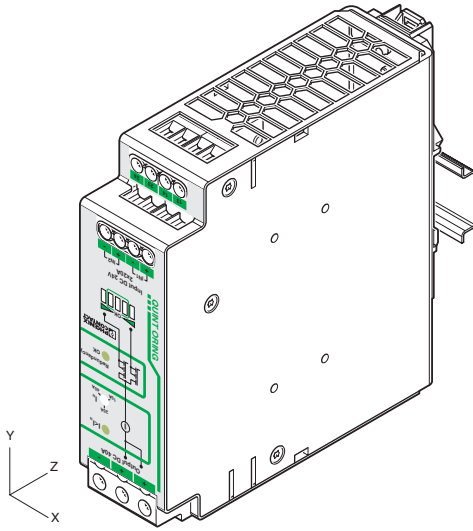

Rotated mounting position 270° X-axis

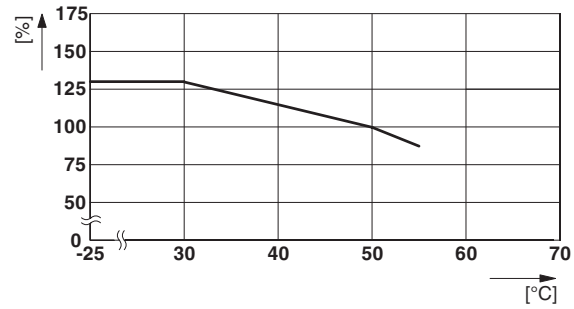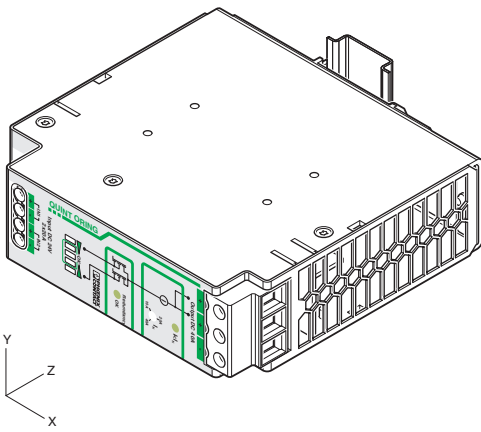

Rotated mounting position 90° Z-axis

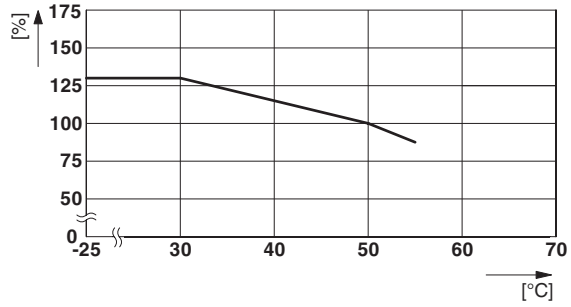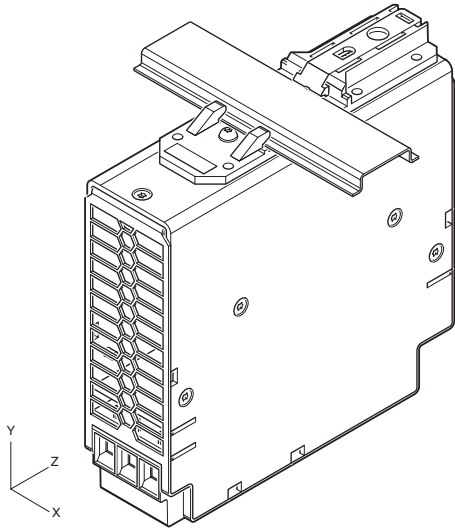

Rotated mounting position 270° Z-axis

